


HEATING SOLUTIONS

Tools & Material Required

Allen key - 12mm
Adjustable Spanner

Key	Component	Qty
A	Thermostatic Cap	1
B	Thermostatic Body	1
C	Manual Body	1
D	Nut	2
E	Valve Tail (3/4" BSP)	1
F	Valve Tail (3/4" BSP)	1
G	Compression Fitting (22mm)	2
H	Balancing Cap	1

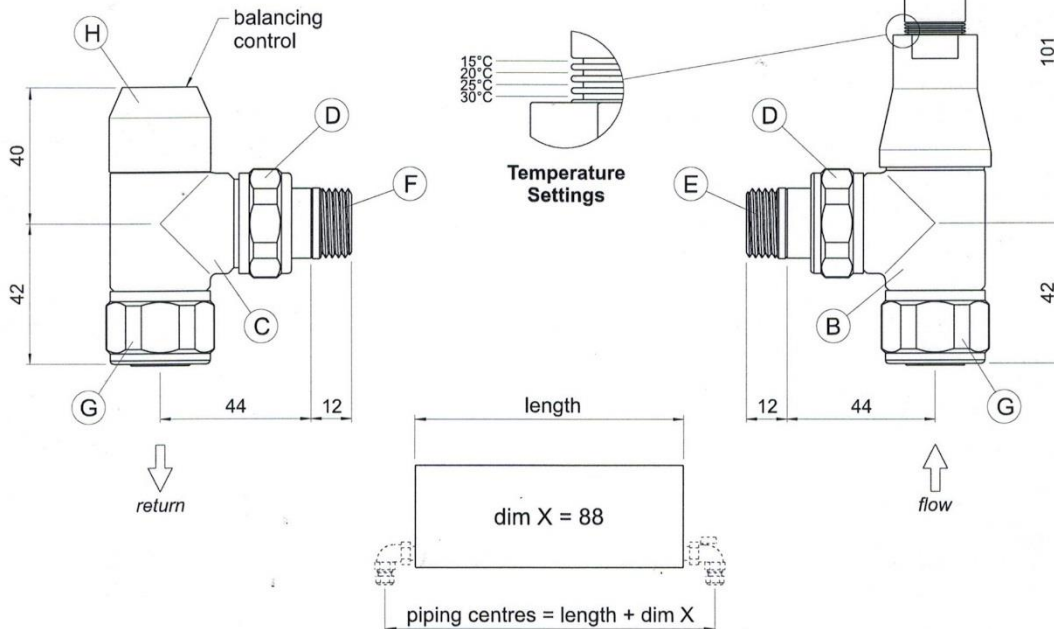

Assembly Instructions

Fit valve tail (E) to flow side of radiator using 12mm Allen key, ensuring nut (D) is in place.

Note: over-tightening of valve tails may cause damage to surface finish of radiator connections.

Do not use grips.

Fit valve tail (F) to return side of radiator using 12mm Allen key, ensuring nut (D) is in place.

Loosen compression fittings (G) and apply valve bodies (B) & (C) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (E) & (F) onto valve bodies (B) & (C) respectively.

Fully tighten compression fittings (G).

Rotate thermostatic cap (A) to desired temperature setting.

After filling and venting radiator, remove cap (H) and adjust balancing control to balance radiator.

Please note: thermostatic valve must only be installed on the flow side of system.