

## CONNECTION OPTIONS

The inlet and outlet are in the bottom.  
The air vent is on top of the outlet manifold.



**AEL HEATING SOLUTIONS**  
**CONNECTION OPTION 1 (STANDARD)**  
**TYPE 01**

The inlet is on top and the outlet is at the bottom of the  
same manifold, and the air vent is at the top of  
the other manifold.



**AEL HEATING SOLUTIONS**  
**CONNECTION OPTION 2**  
**TYPE 02**

The inlet is on one side at the top and the outlet is  
on the other side at the bottom. The air vent is at the  
top of the outlet manifold.



**AEL HEATING SOLUTIONS**  
**CONNECTION OPTION 3**  
**TYPE 03**

The inlet and outlet have an opening of G $\frac{1}{4}$ " G $\frac{3}{4}$ " or G $\frac{1}{2}$ "  
The air vent can be G $\frac{1}{4}$ " G $\frac{3}{8}$ " or G $\frac{1}{2}$ "  
In types 02 and 03 the maximum inlet or outlet is G $\frac{3}{4}$ "