

APPLYING THE THREAD JOINING FLUID

When assembling a Longo radiator please use the thread joining fluid in the bottle attached.


The thread joining fluid is to be applied to the first 4 threads at each end of the nipple and NOT all over the gasket in the middle of the nipple.

INSTRUCTIONS ON HOW TO APPLY THE FLUID

Push the rubber gasket onto the centre of both steel nipples.



Snip the top off the soft plastic bottle and apply the fluid to the first 4 threads to one end of both nipples. Then screw the fluid end a couple of turns into one of the radiators to be joined.

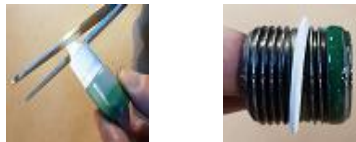

Now apply fluid to the first 4 threads of the other end of both nipples and then slowly bring both radiators together to be joined.



From this point use the joining key to join the radiator following the “Assembly instructions” provided separately.

